


260-1303 Installation Instruction

ASI does not supply the spring, retainer ring or holder ring, so you will need to reuse the original parts when you replace the piston.

1.



2.

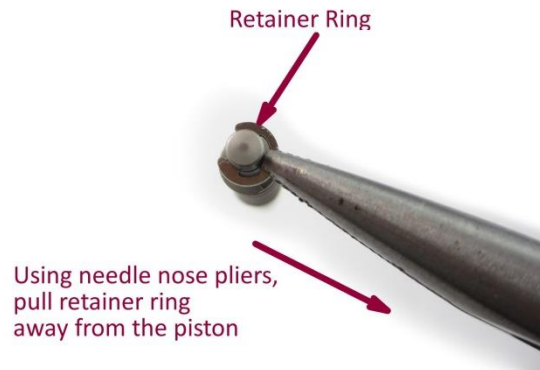

3. Disassembled parts



4. You will need to assemble the parts in reverse order. In order to put the retainer ring back, you will need to hold the retainer ring as shown below.

